


Double Arm Soft Closing Wardrobe Lift Sheet


1 Left & Right Ass.

Set the installation position on both sides of the cabinet acc. to the product size. The main parts on both sides should be installed horizontally and in the same depth. Then take out 8pcs 4x20mm flat head screws from the accessory bag to fix the main parts of the wardrobe lift, and finally pull down the square tube to the horizontal direction

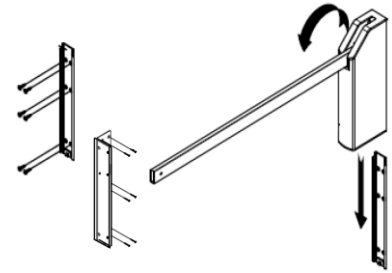


2 Angle Adjustment Accessories Ass.

When installing on the back, rotate the lever arm 90 degrees and insert the angle adjustment accessory into the lever arm as shown in the diagram,

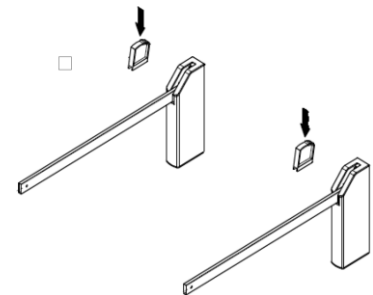

3 Cross bar Ass.

Rotate the circular tubes at both ends by hand acc. to the width of the cabinet, adjust the length of the cross bar in the direction of 2 as shown in the figure to the appropriate size, and then select the length of the circular tubes at both ends to lock the cross bar in the direction of 1.3 as shown in the figure, then install the joints at both ends and insert them into the main square tube, lock two Φ 8x35mm screws, and lock them with

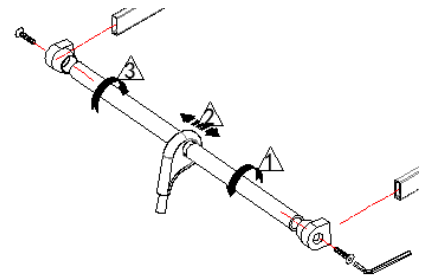

4 Pull Rod & Cross

Insert the pull rod into the cross bar trident link and fix it with M4*6mm screws



5 Accessories List

- | | |
|--------------------------|-----------------|
| 1. Left/Right Main Parts | 1Sets |
| 2. Cross bar | 1Sets |
| 3. Pull Rob & Cross Bar | 1Sets |
| 4. Square Tubes | 2Pieces |
| 5. Fixing Plate | 4Pieces |
| 6. Screw Packing , | |
| M8*35MM 2pcs | Alley Key 1pcs |
| Ø4.0x20 screw 16 pcs、 | Ø4x6 Screw 1pcs |

